



**The Clean Experience**  
Stoomspecialist

**Stoomreiniger (gaiser 4000 plus)**

**TCE G40  
&  
TCE G40 plus**



# CONTENTS

<u>1. INTRODUCTION</u> .....	12
<u>2. FUNCTIONS</u> .....	12
<u>2.1 Technical data</u> .....	12
<u>2.2 Safety devices</u> .....	12
<u>2.3 Warning</u> .....	12
<u>3. CONTROL PANEL</u> .....	13
<u>4. INSTRUCTION FOR USE</u> .....	13
<u>4.1 Preparation</u> .....	13
<u>4.2 Starting</u> .....	13
<u>4.3 Refilling water</u> .....	5
<u>5. MAINTENANCE</u> .....	14
<u>5.1 Periodically</u> .....	14
<u>5.2 Cleaning the boiler</u> .....	14
<u>5.3 Troubleshooting</u> .....	6
<u>6. ACCESSORIES</u> .....	15
<u>7. WARRANTY</u> .....	16
<u>8. DECLARATION OF CONFORMITY</u> <b>CE</b> .....	16
<u>9. WASTE AND RECYCLING</u> .....	16

## **1. INTRODUCTION**

This manual is an integral part of the appliance and contains all necessary information for its operation and maintenance.

Therefore the user has to read carefully these instructions before using the appliance.

For information, spare parts or accessories, please contact your retailer.

This manual or a copy has to be always at the disposal of the operator for consultation.

Following these instructions, avoids taking useless risks for security and reduces damages, cost for repairs and time the appliance does not work.

This cleaning appliance is suitable for a collective use for example in hotels, schools, hospitals, factories, shops, offices and in houses.

## **2. FUNCTIONS**

Gaiser 4000 is a steam generator continuous refilling for industrial use.

### **2.1 Technical data**

- Boiler in stainless steel
- Boiler capacity 3 lt
- Boiler power. 3.500 W
- Working pressure 800 kPa (8 bar)
- Temperature max 178° C
- Heating time 8 minutes
- Cold water tank 5 lt
- Weight 19 Kg

Data, specifications and equipment which are described in this document are not binding and may be altered with.

### **2.2 Safety devices**

- Thermostat with manual resetting
- Thermostat with bulb automatic
- Safety valve 13 bar
- Electronic power balance
- Teflon seals
- Low voltage handle

## 2.3 Warning



The manufacturer declines all responsibility for damages deriving from using the appliance if:

- ▶ the instructions of this manual are not respected
- ▶ modifications are brought in without previous authorization from the manufacturer
- ▶ repairs are made by unauthorized persons
- ▶ parts of the appliance are replaced with not genuine parts
- ▶ the machine is used differently from how it is recommended


- the high pressure steam jet can be dangerous if it is used in an improper way. Never direct the steam jet towards people.
- Never direct the steam jet towards yourself or other people for cleaning clothes or shoes.
- Do not use the appliance near other people, if these do not wear protective clothing.
- Pay attention not to touch the nozzles, as those become very hot while using steam.
- If the electrical cable is damaged, it has to be replaced immediately by the manufacturer or by an authorized person.
- If an extension cable is used, plug and socket have to be water tight.
- ATTENTION : a not adequate extension can be dangerous.
- In case of leaks of foam or liquids, switch off immediately !
- Children or not trained persons must not use this appliance.
- To guarantee the safety of this appliance, only genuine spare parts have to be used.



*Do not pull at the steam hose, it could get damaged*

## 3. CONTROL PANEL

1. Main switch
2. Socket
3. steam regulator
4. Indicator light for power supply
5. Indicator light for lack of water
6. Indicator light for steam ready
7. Boiler pressure gauge
8. Water tank cap

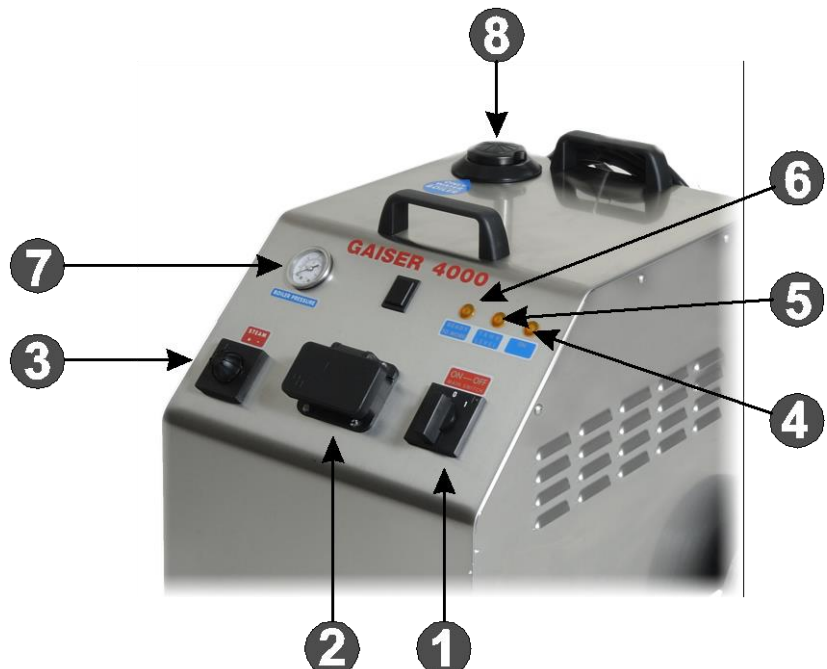

## 4. INSTRUCTION FOR USE

### 4.1 Preparation

- Open the cap (8) and fill the cold water tank with **tap water**.
- Connect the plug to a socket on a patchboard provided with a switch with an efficient earth connection.



***The appliance is provided with a power cord according to its electrical input characteristics. It's important to verify that the electrical mains are according to the norms. It is recommended that the power supply of this appliance includes a differential switch of 30 mA maximum.***

### 4.2 Starting

- For power supply, switch on the main switch 1
- The indicator light 4 goes on
- When the pump has filled up the boiler and goes out, the appliance starts heating up (about 8 minutes).
- The indicator light 6 goes on ; the appliance is ready for use now.
- Connect the steam hose to the socket 2, making sure that it is inserted correctly.
- Push the steam button on the handle and direct the steam jet towards the area which has to be cleaned.



***Before starting steam cleaning, blow off the initial condensation in the conducts in a bucket or any other suitable place.***

### 4.3 Refilling water

When the cold water tank is empty, you will hear an acoustic signal and the indicator light for lack of water 5 will go on. No steam comes out anymore.

Proceed as follows :

- Open the cap 8 and fill water in the tank.
- Close the cap 8
- After a few seconds the indicator light 6 will go on, and you can continue cleaning.

## 5. MAINTENANCE



***Always unplug the appliance before cleaning or servicing operations on the machine.***

For the safety of the operator and to secure always perfect performances, the following controls and servicing is recommended :

### 5.1 Periodically

Check regularly that the power cord does not present any signs of wear or ageing. If it is damaged, it is absolutely necessary to replaced it immediately by the same type of power cord, before using the appliance again.

## 5.2 Cleaning the boiler

**A-** The machine has to be cold and the electrical plug disconnected. With a wrench n° 22 open the stopper under the machine and empty completely all remaining water in the boiler. When the boiler is empty, close the stopper carefully but without exceeding.

**B-** Control visually or with a rod the remaining water quantity in the cold water tank : for about 1litter water take 1 litter vinegar (or a recommended descaler)

**C-** Connect the electrical plug, switch on the main switch 1. Wait until the pump finishes to fill the boiler and goes out (it's possible that the indicator light for lack of water 5 goes on and that you hear the acoustic signal). Switch off the main switch 1, disconnect the electrical plug and leave the machine for 8 hours.

**D-** Empty the loose limestone in the solution and rinse the boiler proceeding as per point A.

**E-** Fill the cold water tank with clean water and switch on the machine. For about 10 minutes use steam with care, because it will have a sharp smell because of the remaining vinegar in the boiler and in the conducts.

**F-** When the operation boiler cleaning is completed, to start the appliance again, follow the instructions explained under **Starting** (Rif. 3.2)

## 5.3 Troubleshooting

<b>ANOMALY</b>	<b>SOLUTION</b>
Water is leaking from the accessories	Due to wear or damage of seals –Replace the seals on the coupling paying attention not to cut or to mark them and to place them carefully.
Plug of the steam hose is difficult to insert in the socket of the machine.	Do not force to insert it, but put a bit of silicon on the steam coupling in the machine.
Boiler needs more time to heat up	Clean the boiler as explained.
Pressure goes down quickly while using steam	Symptom of limestone, clean the boiler as explained.

## 6. ACCESSORIES

The right steam hose and suitable accessories are important for the safety of this appliance. Therefore it is recommended to use only genuine steam hose and accessories.



1. Flexible hose with handle and plug
2. Extension units
3. Nozzle Joint
4. Floor brush with pincers
5. Triangular brush with pincers
6. Glass cleaner
7. Steam lance
8. D65 nylon brush
9. D28 nylon brush
10. D28 brass brush
11. Rectangular cloth
12. Triangular cloth

## 7. WARRANTY

The manufacturer STI Srl guarantees this appliance for a period of 12 months from the date of purchase against manufacturing blemish and defects in material.

Warranty conditions:

- ▶ the warranty does not cover damages deriving from normal wear.
- ▶ the warranty does not cover damages or accidents due to non respect of the instructions of this manual, bad servicing or improper use of the appliance.
- ▶ the warranty comprehends replacement and / or repair of faulty parts, including workmanship. Under no circumstances the acknowledgement of the warranty involves an acknowledgement of damages or claims of any type or cause.
- ▶ Transport and packing costs are at the purchaser's charge

The competent courts in case of dispute is in Bassano del Grappa (VI) – Italy.

## 8. DECLARATION OF CONFORMITY

The manufacturing company Sti s.r.l. via Rosi 3,I -36030 Fara Vicentino (VI), declares that the appliance to which the declaration refers is in conformity with the essential safety requirements of the European Directives:

### Safety

Directive 2006/95/EC and subsequent amendments

### Electromagnetic Compatibility

Directive 2004/108/EC and subsequent amendments

The conformity of the directives above mentioned is represented by the  marking of the product.

## 9. WASTE AND RECYCLING

Do not discard the components of the appliance in the environment. For their waste, the laws of the country where the appliance is used have to be observed.

The appliance is constructed with materials that must not be dispersed in the environment. For their disposal contact recycling centres or the supplier.

In accordance with the directives 2002/95/EC, 2002/96/EC and 2003/108/EC, relating to the reduction in use of dangerous components in electric and electronic appliances, and waste disposal”.



The symbol of the barred skip on the appliance indicates that the product, at the end of its working life, must be collected separately from other refuse.

The user must bring the appliance to an appropriate centre for separately collected electronic and electro-technical items, or return it to the seller when purchasing a new equivalent appliance, on a one to one basis.

The appropriate separate collection of the appliance for recycling, to the treatment and compatible environmental disposal contributes to avoiding possible environmental and health effects of a negative nature and encourages the recycling of materials of which the appliance is composed. Abusive disposal of the product by the user instigates the application of sanctions according to Leg. Decree no. 22/1997 (article 50 and following of Leg. Dec. no. 22/1997).





**Voor vragen en advies:**

Mail [info@thecleanexperience.nl](mailto:info@thecleanexperience.nl)

Telefoon 085 – 104 5164

Serviceaanvraag via

Website [www.tce.nl](http://www.tce.nl)

Mail [service@thecleanexperience.nl](mailto:service@thecleanexperience.nl)

Telefonisch 0342 – 701 221

Nabestellingen kunnen via:

Webwinkel [www.tce.nl](http://www.tce.nl)

E- mail: [Info@thecleanexperience.nl](mailto:Info@thecleanexperience.nl)

Telefoon 085 – 104 5164

Onze webwinkel is dag en nacht geopend voor u [www.tce.nl](http://www.tce.nl)

Importeur:

The Clean Experience BV

Anthonie Fokkerstraat 51 B

3772 MP Barneveld

K.v.K. nr. 73499390

BTW nr. NL855816478 B01

Er mag niet uit deze gebruiksaanwijzing gekopieerd of vermenigvuldigd worden zonder toestemming.

©copyright The Clean Experience (TCE) Rev.0711